

# interquartz

## IQ8050s Reference Guide

### MENU FUNCTIONS

#### Using the Menu

There are 6 menus, all of which you access from the Main menu. A menu may have several tabs. Use the navigational keys to go to the required tab. The soft keys may provide you with additional options. To enter the main menu: in Idle mode, press the Menu key. To leave a menu, press the Red phone key.

#### Menu List

##### 1. Messaging

- New and draft
- Inbox
- Sent messages
- Settings
  - Overwrite old
  - Sent messages
  - Voice mail number
  - Display
  - Auto answer msg
  - Silent answer msg

##### 2. Calls

- All
- Answered
- Dialed
- Missed

##### 3. Contacts

- Private
  - New contact
- Central directory

##### 4. Calendar

##### 5. Settings

- General
  - Profiles
    - Select profile
    - Edit profile
    - Reset profiles
  - Time & date
    - Time
    - Date
  - Language
  - Shortcuts
    - Left nav. key
    - Up nav. key
    - Right nav. key
    - Down nav. key

##### LED signal

- LED signal off
- Missed VIP call
- Low battery

##### Security

- Phone lock
- Automatic keylock
- Change PIN code
- Proxy password

##### Handset name

- Reset settings \*
- Reset memory card (optional)
- Status

##### • Sounds & alerts

- Ring volume
- Ring external
- Ring internal
- Ring unknown call
- Ring normal msg.
- Ring urgent msg.
- Ring emergency
- Increasing ring
- Alert volume
- Alert tone
- Increasing alert
- Vibrator
- Key sound
- Confirmation sound
- Coverage warning
- Charger warning
- Ring pattern times

##### • Display

- Wallpaper
- Themes
- Start up screen
- Power save

##### • Calls

- Units
  - Call time
  - Message count
- Answer mode
  - Normal
  - Any key
  - Automatic
- Caller filter
  - Mode
  - List

##### Emergency call

- Message
- Number

##### Mandown call

- Mode
- Message
- Number
- Auto answer
- Delay
- Prealarm time

##### Silent charging

##### • Connectivity

- Register
- Deregister
- Network select
- Bluetooth (optional)
  - Enabled/Disabled
  - Search for devices
  - Paired devices

##### 6 Accessories

- Calculator
- Stopwatch
- Alarms
  - Alarm
  - Recurrent alarm

### PACKAGE CONTENTS

- Handset
- Battery
- Beltclip (attached to handset)
- Belt clipcover



- |    |   |        |   |
|----|---|--------|---|
| 1  | Volume up key                                   | 13     | Keypad  |
| 2  | Volume down key                                 | 1 - 9: | long press for speed dialling (If programmed).  |
| 3  | SOS key   | *:     | used in text editor to enter a star symbol and special characters, or to insert pause in dial mode. |
| 4  | OK key  | 0:     | used in text editor to enter space and special characters.  |
| 5  | Off hook/enquiry (green phone key)              | #:     | used in text editor to capitalize letters and type numbers. Long press activates the silent mode.   |
| 6  | Headset jack connector                          |        |   |
| 7  | Microphone                                      |        |   |
| 8  | Earpiece  |        |   |
| 9  | Color display                                   |        |   |
| 10 | Soft keys                                       |        |   |
| 11 | On hook/clear/power (red phone key)             |        |   |
| 12 | Navigational keys (Up/Right/Down/Left Nav. Key) |        |   |

\* This resets menu settings to their original values but has no effect on your contacts etc.

## Main menu items



## Top row icons



## GETTING STARTED

### Turning the phone on and off

Press and hold the **Red phone** key for a few seconds.

### Lock/unlock your phone

In **Idle** mode, press the **OK** key, and then press the **Lock** soft key. To unlock, press the **OK** key, and then press the **Unlock** soft key.

### Make a call

In **Idle** mode, type the number you want to dial, and then press the **Green phone** key.

### Answer a call

Press the **Green phone** key.

### End a call

Press the **Red phone** key.

### Reject a call

Press the **Reject** soft key.

### Make an enquiry call (also known as broker call)

During a call, press the **Green phone** key and dial the number of the party you want to consult. You can toggle between the two parties, by pressing the **Green phone** key. To transfer the first call to the enquiry call party, press the **Red phone** key.

### Change the volume

During a call, press the **Volume up** or **Volume down** buttons on the side of the phone.

### Use the speaker phone

During a call, press the **Spk on** soft key. To deactivate: press the **Spk off** soft key.

### Mute a call

During a call, press the **Mute** soft key. To turn the microphone on again, press the **Unmute** soft key.

### Listen to voice mail messages

In **Idle** mode, press the **Menu** soft key, choose **Messaging, Inbox**, select **Listen to voice mail**, and then scroll to the required message. Press the **Select** soft key.

*Note: You may need to enter your voicemail number first.*

### Make a shortcut

In **Idle** mode, press the **Menu** soft key, choose **Settings, General**, and select **Shortcuts**. Now you can assign a function to one of the navigational keys.

### Make a speed dialling key

In **Idle** mode, press the **Menu** soft key, choose **Contacts**. Select the contact that you want to assign and press the **More** soft key. Choose **Speed dial** and press **OK**. Scroll to the speed dialling key number that you want and press the **Add/Replace** soft key.  
(If a number has already been assigned to this key, it will be replaced.)

### Register the handset

In **Idle** mode, press the **Menu** soft key, choose **Settings, Connectivity, Register**. Select the required base, **OK**.

Enter the Park code, **OK/Skip**. If only one DECT system is available, then just press **Skip**.

Enter the PIN code, **OK**. The PIN is generated by the DECT Manager.

Enter Network Name, **Save**. This will be shown on the idle display.

Enter Number, **Save**. This is the phone number assigned to the DECT handset.

## Additional information

IQ8050s Handset / IQ8050 Multicharger

### Important safety information

Charge the battery or handset only in combination with IQ8050s DECT Handset Desktop Charger and the TEN PAO AC/DC adaptor S008CM1200040 that comes with the product or with the IQ8050 Multicharger and the TEN PAO AC/DC adaptor S040EM1200250. Plug the TEN PAO AC/DC adaptor S008CM1200040 or TEN PAO AC/DC adaptor S040EM1200250 in a wall outlet socket near the equipment for easy access/removal of the AC/DC adaptor.

### Important battery information

This product uses rechargeable Lithium-Ion batteries 3.7V, 650mAh. Only use batteries that come with the handset or dedicated spare Shenzhen Bak Technology Co., Ltd batteries produced for IQ8050s DECT Handset.

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. For battery replacement or removal please unlock the battery knob on the battery. Never disassemble, customize or short-circuit batteries. Do not place battery in fire or heat the battery. Charge the battery or handset only in combination with IQ8050s DECT Handset Desktop Charger and the TEN PAO AC/DC adaptor S008CM1200040 that comes with the product or with the IQ8050 Multicharger and the TEN PAO AC/DC adaptor S040EM1200250.

### Sensitive Electronic Environment

Any radio-based equipment can potentially cause interference with other equipment and can be interfered from other equipment. This also applies for DECT equipment. However due to the very low transmission power level the chances for interference are very small. Research proves that operational DECT phones normally don't influence electronic equipment however some precautions must be taken into account for sensitive electronic equipment e.g. sensitive laboratory equipment. When DECT phones operate in straight nearness of sensitive electronic equipment incidental influence can appear. You are advised not to place the DECT phone on or close (less than 10cm) to this kind of equipment, even in standby mode. Please also use the other documentation supplied with the various parts of your telephone system.