



Resetting WPJ Howto

1. Reset WPJ slave unit by turning it on and off 5 times (solid red light when done)
2. Reset WPJ Base by turning it off and on 8 times (green light flashes fast when done)
3. Link RJ12 cable between slave and base then turn power on. Wait about 10 seconds for base and slave to pair. When pairing complete both will display a constant green light

Notes

- When resetting base or slave make sure nothing is plugged into either unit and only the base or slave are plugged in at any one time.
- Turn power on and off at wall.