

<b>EN</b>	Dear Customer, Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH. We hope you enjoy your Gigaset.	<b>DA</b>	Kære Kunde, Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer. Vi håber, du får meget glæde af din Gigaset.
<b>DE</b>	Sehr geehrte Kundin, sehr geehrter Kunde, die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen. Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.	<b>FI</b>	Arvoisa asiakkaamme, Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiöksen oikeudenomistaja, joka jatkoj puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina. Toivotamme Teille paljon iloa Gigaset-laitteestanne.
<b>FR</b>	Chère Cliente, Cher Client, la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH. Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.	<b>SV</b>	Kära kund, Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH. Vi önskar dig mycket nöje med din Gigaset.
<b>IT</b>	Gentile cliente, la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.	<b>NO</b>	Kjære kunde, Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH. Vi håper du får stor glede av din Gigaset-enhet.
<b>NL</b>	Geachte klant, Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien. Wij wensen u veel plezier met uw Gigaset.	<b>EL</b>	Αγαπητή πελάτισσα, αγαπητέ πελάτη, η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.
<b>ES</b>	Estimado cliente, la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH. Le deseamos que disfrute con su Gigaset.	<b>HR</b>	Poštovani korisnici, Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH. Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.
<b>PT</b>	SCaros clientes, Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH. Desejamos que tenham bons momentos com o seu Gigaset.	<b>SL</b>	Spoštovani kupec! Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priložnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH. Želimo vam veliko užitek ob uporabi naprave Gigaset.

- CS** Vážení zákazníci,  
společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.
- SK** Vážený zákazník,  
Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.
- RO** Stimatе client,  
Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH.  
Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.
- SR** Poštovani potrošaču,  
Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH.  
Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.
- BG** Уважаеми потребители,  
Gigaset Communications GmbH е правоприемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH.  
Надяваме се да ползвате с удоволствие вашия Gigaset.
- HU** Tisztelt Vásárló!  
A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni.  
Reméljük, megelégedéssel használja Gigaset készülékét.
- PL** Szanowny Kliencie,  
Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH.  
Życzymy wiele przyjemności z korzystania z produktów Gigaset.
- TR** Sayın Müşterimiz,  
Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır.  
Gigaset'ten memnun kalmanızı ümit ediyoruz.
- RU** Уважаемые покупатель!  
Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH.  
Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.

# SIEMENS



## Gigaset C38H


Issued by  
Siemens Home and Office Communication Devices GmbH & Co. KG  
Schlavenhorst 66  
D-46395 Bocholt

© Siemens Home and Office Communication Devices GmbH & Co. KG 2008  
All rights reserved. Subject to availability.  
Rights of modification reserved.

[www.siemens.com/gigaset](http://www.siemens.com/gigaset)

# Gigaset

## The handset at a glance

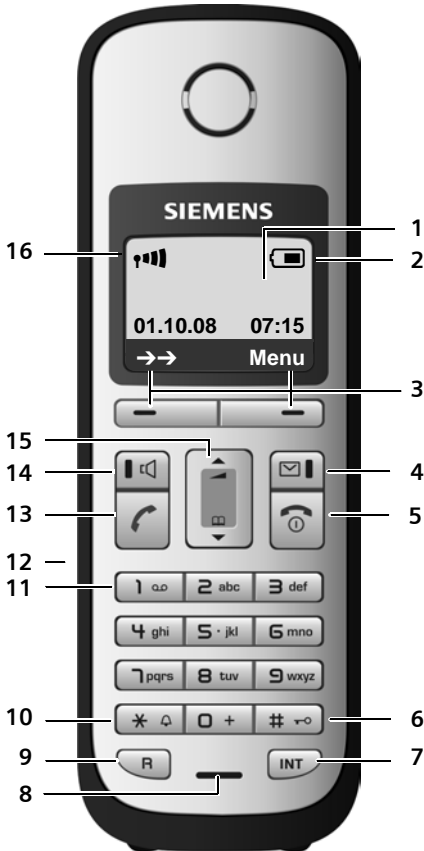

- 1 **Display** in idle status (example)
- 2 **Charge status of the batteries** ( → page 9)
- 3 **Display keys** ( → page 15)
- 4 **Message key** ( → page 23)  
Access to calls and message lists;  
Flashes: new message or new call
- 5 **End call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
Keypad lock on/off (press and hold in idle status);  
toggles between upper/lower case and digits
- 7 **Internal key**  
Make an internal call ( → page 21)
- 8 **Microphone**
- 9 **Recall key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 10 **Star key**  
Ringer melody on/off (press and hold),  
With an open connection: Switch between dial pulsing/touch tone dialling (press briefly)
- 11 **Key 1**  
Dial answer machine (depending on the base station)/network mailbox (press and hold)
- 12 **Connection socket** for headset ( → page 13)
- 13 **Talk key**  
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 14 **Handsfree key**  
Switch between earpiece and handsfree mode;  
Lights up: handsfree activated  
Flashes: incoming call
- 15 **Control key** ( → page 15)
- 16 **Signal strength** ( → page 9)

# Contents

<b>The handset at a glance</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>4</b>
<b>First steps</b> .....	<b>5</b>
Check the package contents .....	5
Setting up the charging cradle .....	5
Connecting the charging cradle .....	6
Setting up the handset for use .....	7
Connecting the headset .....	13
What would you like to do next? .....	14
<b>Using the phone</b> .....	<b>15</b>
Control key .....	15
Display keys .....	15
Keys on the keypad .....	16
Correcting incorrect entries .....	16
Menu guidance .....	16
Activating/deactivating the handset .....	17
Activating/deactivating the keypad lock .....	17
Illustration of operating steps in the user guide .....	18
<b>Menu tree</b> .....	<b>19</b>
<b>Making calls</b> .....	<b>20</b>
Making an external call .....	20
Ending a call .....	20
Answering a call .....	20
Handsfree talking .....	20
Muting .....	20
Making internal calls .....	21
<b>Using the directory and lists</b> .....	<b>21</b>
Directory .....	21
Last number redial list .....	23
Opening lists with the message key .....	23
<b>ECO DECT</b> .....	<b>23</b>
<b>Setting the alarm clock</b> .....	<b>24</b>
<b>Handset settings</b> .....	<b>24</b>
Changing date and time .....	24
Changing the display language .....	24
Setting the display .....	25
Activating/deactivating auto answer .....	25
Changing the handsfree/earpiece volume .....	25
Changing ringer .....	25
Advisory tones .....	26
Restoring the handset default settings .....	27

<b>Service Centre</b> .....	<b>28</b>
Questions and answers .....	29
Warranty .....	30
<b>Environment</b> .....	<b>32</b>
<b>Appendix</b> .....	<b>33</b>
Care .....	33
Contact with liquid .....	33
Specifications .....	33
Writing and editing text .....	34
<b>Accessories</b> .....	<b>35</b>
<b>Mounting the charging cradle to the wall</b> .....	<b>35</b>
<b>Index</b> .....	<b>36</b>

# Safety precautions

---

## Warning

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the charger.



Only use the **recommended, rechargeable batteries** (→ page 33), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower rooms. The charging cradle is not splashproof (→ page 33).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.

## Please note

Not all of the functions described in this user guide are available in all countries.

# First steps

## Check the package contents



- 1** one Gigaset C38H handset,
- 2** one charging cradle,
- 3** one mains adapter,
- 4** two batteries,
- 5** one battery cover,
- 6** one belt clip,
- 7** one user guide.

## Setting up the charging cradle

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

- ▶ Set up the charging cradles at a central location on a flat, non-slip surface in your house or apartment.

### Please note

Pay attention to the range of the base station.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 23) is activated.



## First steps


The bottom of the phones do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

For instructions on how to mount the charging cradle to a wall, please see → page 35.

### Please note:


- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

## Connecting the charging cradle

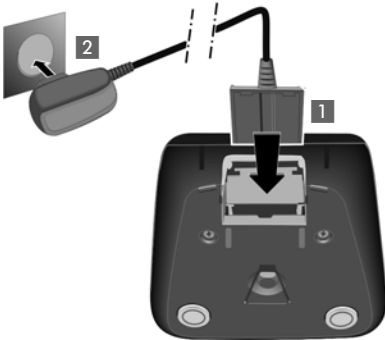

- ▶ Connect the flat plug of the mains adapter **1**.
- ▶ Plug the mains adapter into the plug socket **2**.

If you need to disconnect the plug from the charging cradle, press the release button **1** and disconnect the plug **2**.

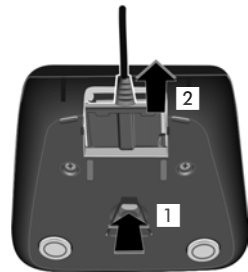

## Setting up the handset for use




The display is protected by a plastic film. **Please remove the protective film!**

### Inserting the batteries and closing the battery cover

#### Warning

Use only the rechargeable batteries (→ page 33) recommended by Siemens. Never use conventional (non-rechargeable) batteries as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.

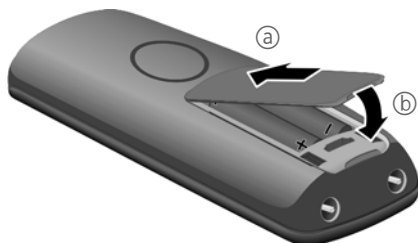

- ▶ First insert the battery cover at the top **a**.
- ▶ Then press the cover **b** until it clicks into place.

If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the cavity on the casing and pull the battery cover upwards.



### Attaching the belt clip

The handset has notches on each side to accommodate the belt clip.

- ▶ Press the belt clip onto the back of the handset so that the notches on the belt clip click into position.




### Registering the handset to the base station

Before you can use the phone, you must first register the handset to the base station. The actual registration procedure will depend on the type of base station.

Automatically register the C38H handset to the Gigaset C380/C385 base station



- ▶ Place the handset with the **display facing up** in the base station.

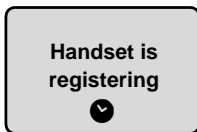

The handset registers automatically. Registration can take **up to 5 minutes**. **Do not remove the handset from the base station during this time.**

#### Please note

- ◆ Each key press interrupts the automatic registration.
- ◆ If automatic registration does not work, the handset will have to be registered manually.

### Manually registering the C38H handset

You must activate manual registration of the handset **on both the handset and the base station.**


**On the handset:**

**Menu** → Settings → Handset → Register Handset

(If you require further information on the illustration of these operating steps, please see → page 18.)



Enter the system PIN of the base station (the default is 0000) and press **OK**.

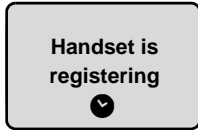

The registration screen is displayed.

**On the base station:**

Within 60 sec. press and **hold** the registration/paging key on the base station (approx. 3 sec.).

The following is displayed after successful automatic or manual handset registration:



- ◆ the strength of the reception signal between base station and handset:
  - good to poor:
  - no reception:
- ◆ battery charge status:
  - (flat to full)
  - flashes: batteries almost flat
  - flashes: charging procedure

The handset is assigned the lowest unassigned internal number (1–4). If more than one handset is registered to the base station, the internal handset number appears on the display, e.g. INT 2. If the internal numbers 1–4 are already assigned to other devices, the number 4 will be overwritten.

To charge the batteries, leave the handset in the base station/charging cradle.

**Please note**

Only place the handset in the base station or charging cradle that is intended for it.

Should you have any questions and problems → page 29.

## Initial charging and discharging of the batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.



- ▶ Place the handset in the base station or charging cradle for **eleven** hours.



- ▶ Then remove the handset from the base station or charging cradle and do not replace it until the batteries are completely discharged.

### Please note

- ◆ After the first battery charge **and** discharge you may replace your handset in its base station or charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time


Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



- ▶ Press the key below **Menu** on the display screen to open the main menu.




- ▶ Press the bottom of the control key ...

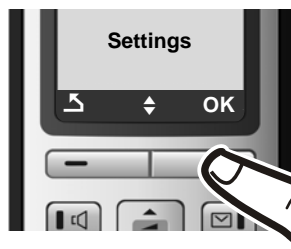

... until the **Settings** menu item appears.

- ▶ Press the key below **OK** on the display screen to confirm your selection.

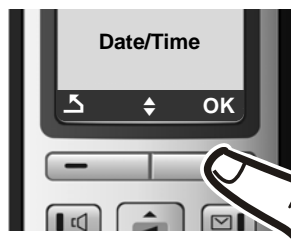


The **Date/Time** menu item appears on the display.


- ▶ Press the key below **OK** on the display screen to open the input field.



- ▶ The active line is marked [...]. Enter day, month and year as an 8-digit number via the handset, e.g. for 01/10/2008.

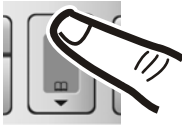

If you want to correct an entry, press the top or bottom of the control key to toggle between fields.

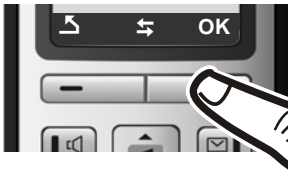

- ▶ Press the key below **OK** on the display screen to confirm your selection.



- ▶ Enter the hours and minutes as four digit numbers via the handset e.g. for 07:15 am. If necessary, use the control key to toggle between fields.

- ▶ Press the key below **OK** on the display screen to confirm your selection.



The display shows **Saved**. You will hear a confirmation tone.



- ▶ Press and **hold** the end call key to return to the idle status.

## Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example

Your phone is now ready for use.



### Please note

The range icon is only displayed in idle status if Eco Mode+ is deactivated (depending on the base station, see your phone's user guide).

## Connecting the headset



You can connect various headset types (with 2.5 mm jack connector), including HAMA Plantronics M40, MX100 and MX150.

A compatibility list of tested headsets can be found on the Internet at: [www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).



## What would you like to do next?

Now you have successfully started your Gigaset you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone"


→ page 15.

Information on ...	... is located here.
Setting the ringer melody and volume	▶ page 25
Setting the handset volume	▶ page 25
Setting Eco Mode / Eco Mode+	▶ page 23
Transferring directory entries from existing Gigaset handsets to the new handset(s)	▶ page 22

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 29) or contact our Customer Care team (→ page 33).

# Using the phone



## Control key

In the following description the side of the control key you need to press for each operation is indicated accordingly, e.g.  for "press the top of the control key".



The control key has a number of different functions:





### When the handset is in idle status

-  Open the directory.
-  Call up the menu for setting the handset's call volume (→ page 25), ringer melodies (→ page 25) and advisory tones (→ page 26).

### In the main menu, in submenus and lists

-  /  Scroll up/down line by line.

### In input fields

Use the control key to move the cursor to the left  or right .

### During an external call

-  Open the directory.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

## Display keys






The function of the display keys changes depending on the particular operating situation. Example:






Current display key functions are shown in the bottom display line.

Display keys

### Important display keys:

-  Open a context-dependent menu.
-  Confirm selection.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.
-  Open the last number redial list.

## Keys on the keypad

 /  /  etc.


Press the matching key on the handset.



Enter digits or letters.

## Correcting incorrect entries


You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press  to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the (flashing) character when entering the time and date etc.

## Menu guidance



Your telephone's functions are accessed using a menu that has a number of levels.

### Main menu (first menu level)

- ▶ When the handset is in idle status, press  to open the main menu

The main menu functions are shown on the display as a list with name and icon.



To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key .

### Submenus


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press .


Or:

- ▶ Enter the corresponding digit combination ( → page 19).

**Briefly** press the end call key  once to return to the previous menu level/cancel the operation.

### Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Any settings you have not confirmed by pressing  will be discarded.

An example of the display in idle status is shown on → page 13.

## Activating/deactivating the handset




With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.  
Press and **hold** the end call key again to switch the handset on.

## Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

## Illustration of operating steps in the user guide

The operating steps are shown in abbreviated form.

Example:

The illustration:

**Menu** → Settings → Handset → Auto Answer (✓ = on)

means:



- ▶ Press the display key **Menu** to open the main menu.



- ▶ Press the bottom of the control key until the **Settings** menu item appears on the display.
- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press the bottom of the control key until the **Handset** menu item appears on the display.
- ▶ Press the display key **OK** to confirm your selection.




- ▶ Press the bottom of the control key until the **Auto Answer** menu item appears on the display.
- ▶ Press the display key **OK** to activate/deactivate the function (✓ = on).

# Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).


**Example:** **Menu**    for "Set ringer volume".

With the telephone in **idle status**, press **Menu** (open main menu):

1  **SMS (Menu dependent on base station)**

4  Alarm Clock

4-1	Activation	→ page 24
4-2	Wake up time	→ page 24

5  **Voice Mail (Menu dependent on base station)**

7  Settings

7-1	Date/Time	→ page 11
7-2	Audio Settings	7-2-1 Call Volume → page 25
		7-2-2 Ringer Volume → page 26
		7-2-3 Ringer Melody → page 26
		7-2-4 Advisory Tones → page 26
		7-2-5 Battery Low → page 26
7-3	Handset	7-3-1 Display → page 25
		7-3-2 Language → page 24
		7-3-3 Auto Answer → page 25
		7-3-4 Register Handset → page 8
		7-3-5 Reset Handset → page 27
7-4	Base	<b>(Menu dependent on base station)</b>



## Making calls

---




### Making an external call


---

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .


You are shown the duration of the call while the call is in progress.

#### Please note

- ◆ Dialling with the directory (→ page 21) and last number redial list (→ page 23) saves repeated typing of numbers.
- ◆ You can assign a number from the directory to a key for speed dialling (→ page 22).


### Ending a call

---



 Press the end call key.

### Answering a call

---

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can answer the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the Auto Answer function is activated (→ page 25), the handset automatically answers the call when you remove it from the charging cradle.

To deactivate the ringer, press the **Menu** display key and select Silent. You can take the call as long as it is displayed on the screen.

### Handsfree talking



---

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

### Activating/deactivating handsfree mode


---

#### Activating while dialling

  Enter the number and press the handsfree key.



- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

#### Switching between earpiece and handsfree mode

 Press the handsfree key.

Activate/deactivate handsfree during a call.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume (→ page 25).

### Muting

---

You can deactivate the microphone in your handset during an external call.


**Mute** Press the display key to mute the handset.


**On** Press the display key to switch the microphone back on.

## Making internal calls


Internal calls to other handsets registered on the same base station are free.

### Calling other handsets


 Start internal call. The display shows Insert INT No..

 Enter the internal number of the receiving handset. The handset is called.

or:

 Press the display key. All handsets are called.

### Ending a call

 Press the end call key.

## Using the directory and lists


The options are:

- ◆ Directory
- ◆ Last number redial list
- ◆ Lists dependent on the base station ( → base station user guide).

## Directory

You can save up to 150 numbers and corresponding names in the directory.

You can create a personalised directory for your own individual handset. However, you can send the list or individual entries to other handsets ( → page 22).

- ▶ With the handset in idle status, open the directory by pressing the  key.

### Length of the entries

Number: max. 32 digits


Name: max. 16 characters


#### Please note

You can assign a number from the directory to a key for speed dialling → page 22.

## Saving the first number in the directory


 → Dir. empty New Entry?


 Enter the number and press **OK**.

 Enter the name and press **OK**.

## Saving the first number in the directory

 → **Menu** → New Entry

 Enter the number and press **OK**.

 Enter the name and press **OK**.

## Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.



## Selecting a directory entry


 Open the directory.

You have the following options:

- ◆ Use  to scroll to the entry until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry using  if required.

## Dialling a number from the directory

 →  (Select entry)

 Press the talk key. The number is dialled.



## Managing directory entries

---

 →  (Select entry)

### Editing an entry

**Menu** → Edit Entry




Edit the number if required, and press **OK**.




Edit the name if required, and press **OK**.

### Using other functions

**Menu** Press the display key.

The following functions can be selected with :

#### Use Number

Save or modify a saved number and then dial with  or save as a new entry; to do so, press **Menu** → Copy to Directory → **OK** after the number appears on the display.

#### Delete Entry

Delete a selected entry.

#### Send Entry

Send a single entry to a handset (→ page 22).

#### Delete List

Delete **all** directory entries.

#### Send List

Send complete list to a handset (→ page 22).



#### Shortcut


Assign the current entry for speed dial to a selected key.

## Using speed dial keys

---

You can assign directory entries to the keys 0 and 2–9:

 →  (Select entry) → **Menu**

→ Shortcut →  (press the key you want to assign the number to)



**To dial**, press and **hold** the required speed dial key.

## Sending the directory to another handset

---

### Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 →  (Select entry) → **Menu** (open menu) → Send Entry / Send List



Enter the internal number of the receiving handset and press **OK**.

Successful transmission is acknowledged with the message **Entry copied.** You can transfer several individual entries one after the other by responding **OK** to the **Next entry?** prompt.

### Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

## Copying a displayed number to the directory

---

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, or in an SMS (depending on the base station) to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the Enter Name line.

A number is displayed:




**Menu** → Copy to Directory

▶ Complete the entry → page 21.

## Using a number from the directory

---

In some operating situations you can open the directory to copy a number, for example. Your handset must be in the idle status.

-  Open the directory.
  -  Select entry.
  - OK** Press the display key.
- Select function with .




## Last number redial list

---

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.



### Manual last number redial


---

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again. The number is dialled.

### Managing entries in the last number redial list

---

-  Press the key **briefly**.
-  Select entry.
- Menu** Open menu.

The following functions can be selected with .

Use Number (as in the directory,  
→ page 22)

Copy to Directory


Copy an entry to the directory  
(→ page 21).


Delete Entry (as in the directory,  
→ page 22)

Delete List (as in the directory, → page 22)

## Opening lists with the message key

---

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

## ECO DECT

---

You are helping to protect the environment with your Gigaset C38H.

### Reduced energy consumption

---

Your telephone has an energy-saving adapter plug and uses less energy.

### Reduced transmission power (depending on the base station)

---

**The transmission power can only be reduced if your base station supports this function.**

The transmission power of your telephone is reduced **automatically**:

- ◆ The handset's transmission power is reduced depending on the distance to the base station.
- ◆ The transmission power at the base station is reduced to virtually zero when only one handset is registered and is standing in the base station.

You can reduce the transmission power of the handset and base station even further by using Eco Mode or Eco Mode+. For further information, please see your phone's user guide.


## Setting the alarm clock

**Precondition:** The date and time have already been set (→ page 11).

### Activating/deactivating the alarm clock

**Menu** → Alarm Clock → Activation (✓ = on)

After you activate the alarm clock, the menu for setting the wake up time opens automatically (→ page 24).

If the alarm clock is set, the wake-up time appears with the  icon in the display instead of the date.

### Setting the wake-up time.

**Menu** → Alarm Clock → Wake up time



Enter the wake-up time in hours and minutes, then press **OK**.

### When the alarm clock rings...

#### Alarm repeat after 5 minutes

**Snooze** Press the display key or any key.

If you press **Snooze** three times, the alarm clock switches off for 24 hours.

#### Turning off the alarm clock for 24 hours

**Off** Press the display key.

## Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.









### Changing date and time

To change the time, open the input field with:

**Menu** → Settings → Date/Time

Enter Date:

Enter the day, month and year in 8-digit format, e.g.

for 01/10/08.

Enter Time:

Enter hours and minutes as 4 digits, e.g.     for 07:15 a.m.

**OK** Press the display key

### Changing the display language

You can view the display texts in different languages.

**Menu** → Settings → Handset → Language

The current language is indicated by a .



Select a language and press **OK**.



Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

**Menu**   

Press keys in sequence.



Select the correct language and press **OK**.

## Setting the display

You have a choice of four colour schemes and several different contrasts. You can also set a screensaver and backlight.

**Menu** → Settings → Handset → Display

You have the following options:

### Screensaver

The available settings are No Screensaver, Globe or Digital Clock.

### Col. Scheme

Four colour schemes are available. When the backlight is turned off, the display is shown in black and white regardless of the selected setting.

### Contrast

There are 9 available contrast levels.


### Backlight

In Charger / Out of Charger. Determines whether the backlight stays on permanently or is turned off after a certain time (✓ = permanently switched on).

### Please note


If the backlight is turned on outside the charging cradle, the standby time for the handset is considerably reduced!

## Activating/deactivating auto answer



When this function is activated, when a call arrives you can simply lift the handset out of the charging cradle without having to press the talk key .

**Menu** → Settings → Handset

→ Auto Answer (✓ = on)

 Press and **hold** (idle status).

## Changing the handsfree/earpiece volume

You can adjust the volume for handsfree talking to one of five settings (1-5, e.g. volume 3 = ) and the earpiece volume to one of three (1-3, e.g. volume 2 = .

### Setting the volume during a call

The setting applies to the current mode (earpiece or handsfree).

You are conducting an external call.



Press the control key.



Set the volume.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **OK**.

### Adjusting the volume via the menu

**Menu** → Settings → Audio Settings

→ Call Volume → Earpiece Volume /

Handsfree Volume







Adjust the volume and press **OK**.



Press and **hold** (idle status).

## Changing ringer

### ◆ Volume:

Five volume levels (1–5; e.g. volume 3 =  ) and "crescendo" ring (6; volume increases with each ring =  .

### ◆ Melody:

List of pre-loaded ringer melodies. The first three melodies are the "classical" ringer melodies.

You can also set different ringer melodies for the following functions:

- ◆ External Calls: for external calls
- ◆ Internal Calls: for internal calls
- ◆ Alarm Clock: for the alarm clock

## Setting the ringer volume

---


The ringer volume is the same for all types of ring.


**Menu** → Settings → Audio Settings  
→ Ringer Volume

Or in idle status:

 → Ringer Volume

Then:

 Adjust the volume and press **OK**.

 Press and **hold** (idle status).


## Setting the ringer melody


---

Set different ringer melodies for external calls, internal calls and the alarm clock.

**Menu** → Settings → Audio Settings  
→ Ringer Melody

External Calls / Internal Calls / Alarm Clock  
Select and press **OK**.

 Select melody (✓ = on) and press **OK**.



 Press and **hold** (idle status).

## Activating/deactivating the ringer


---

You can turn off the ringer on your handset before you take a call or while the phone is in idle status. You can take a call so long as it is displayed on the screen.

### Deactivating the ringer

 Press the star key **and hold**, until the  icon appears in the display.

### Reactivating the ringer

 Press and **hold** the star key in idle status.

## Advisory tones

---

Your handset uses advisory tones to tell you about different activities and statuses. The following tones can be activated and deactivated independently of each other:

### ◆ Advisory tones:

- **Key click:** every key press is confirmed.
- **Confirmation tone** (rising tone sequence): at the end of an entry/setting, when replacing the handset in the charging cradle and when an SMS is received (depending on the base station) or a new entry is made in the calls list.
- **Error tone** (descending tone sequence): when you make an incorrect entry.
- **Menu end tone:** when scrolling at the end of a menu.

### ◆ Battery low tone: the battery requires charging.

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

## Activating/deactivating advisory tones

---

**Menu** → Settings → Audio Settings  
→ Advisory Tones

Select and press **OK** (✓ = on).

## Setting the battery low tone

---

**Menu** → Settings → Audio Settings  
→ Battery Low

On / Off / During Call

Select and press **OK** (✓ = on). The battery low tone is activated or deactivated or sounds during a call.

## Restoring the handset default settings

---

You can reset individual settings and changes that you have made. This will not affect entries in the directory, calls list or SMS lists (depending on the base station), or the handset's registration to the base station.

**Menu** → Settings → Handset  
→ Reset Handset

Confirm query with **OK** or reject it with **↵**.



Press and **hold** (idle status).

## Service Centre

---

Siemens provides you with product information that can be accessed from the Customer Care section of our website.

[www.gigaset.com.au](http://www.gigaset.com.au)

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

Siemens Gigaset Cordless telephones come with a 2 Year limited warranty that covers faults with the manufacturing process or components.

Siemens will at its discretion, repair or replace, any product supplied that is found to have a manufacturing defect.

Please retain your proof of purchase details for warranty purposes.

For fast and dependable assistance with How to initiate warranty claims, contact us at 1300 780 878 in Australia or [support.gigaset@siemens.com](mailto:support.gigaset@siemens.com)

### **Australian Customers:**

Siemens Home & Office Communications  
Suite 249/1 Queens Road  
Melbourne 3004

### **New Zealand Customers:**

Atlas Gentech  
87 Carbine Road  
Mt Wellington  
Auckland

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Siemens local registered N Number and Telepermit markings




Please have your proof of purchase ready when calling.

## Questions and answers

---

If you have any questions about using your phone, visit us at [www.siemens.com/gigasetcustomercare](http://www.siemens.com/gigasetcustomercare) at any time. The table below contains a list of common problems and possible solutions.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"> <li>1. The handset is not switched on.           <ul style="list-style-type: none"> <li>▶ Press <b>and hold</b> the end call key .</li> </ul> </li> <li>2. The batteries are flat.           <ul style="list-style-type: none"> <li>▶ Charge or replace the batteries (→ page 7).</li> </ul> </li> </ol>
<p><b>"Base" flashes in the display.</b></p> <ol style="list-style-type: none"> <li>1. The handset is outside the range of the base station.           <ul style="list-style-type: none"> <li>▶ Move the handset closer to the base station.</li> </ul> </li> <li>2. The base station's range is reduced because Eco Mode is activated (depending on the base station, please see your phone's user guide).           <ul style="list-style-type: none"> <li>▶ Deactivate Eco Mode or reduce the distance between the handset and the base station.</li> </ul> </li> <li>3. The base station is not turned on.           <ul style="list-style-type: none"> <li>▶ Check the base station mains adapter.</li> </ul> </li> </ol>
<p><b>Handset does not ring.</b></p> <ol style="list-style-type: none"> <li>1. The ringer is deactivated.           <ul style="list-style-type: none"> <li>▶ Activate the ringer (→ page 26).</li> </ul> </li> </ol>
<p><b>The other party cannot hear you.</b></p> <p>You have pressed the <b>Mute</b> display key. The handset is "muted".</p> <ul style="list-style-type: none"> <li>▶ Activate the microphone again (→ page 20).</li> </ul>
<p><b>You hear an error tone</b> (descending tone sequence) <b>when inputting.</b></p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> <li>▶ Repeat the operation. Watch the display and refer to the user guide if necessary.</li> </ul>



## Warranty

---

### **Siemens Gigaset Australian Warranty Card**

Siemens Gigaset Cordless telephones come with a limited manufacturing warranty that covers faults with the manufacturing process or components. Siemens will at its discretion, repair or replace, any Gigaset supplied that is found to have a manufacturing defect. Please retain your proof of purchase details for warranty purposes.

**Please complete and return this card with your goods for evaluation to:**

**Australian Customers:**

Siemens Home & Office Communications  
Suite 249/1 Queens Road  
Melbourne 3004

**New Zealand Customers:**

Atlas Gentech  
87 Carbine Road  
Mt Wellington  
Auckland

**YOU MUST INCLUDE A COPY OF YOUR PROOF OF PURCHASE**

Our Service Centre will determine the whether a fault exists, and if so, its nature, and if the fault is covered by warranty.

Warrantable faults will be repaired or replaced at our discretion, and delivered back to the return address. Non-warrantable faults cannot be cost-effectively repaired and will be delivered back to the return address. No-Fault-Found instances will be delivered back to the return address.

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Siemens local registered N Number and Telepermit markings.

# Siemens Gigaset Australian Warranty Card

Name of person returning goods: \_\_\_\_\_

Telephone no: \_\_\_\_\_

Fax no: \_\_\_\_\_

Return address: \_\_\_\_\_

\_\_\_\_\_

Siemens Gigaset Model: \_\_\_\_\_

Purchased from: \_\_\_\_\_

Fault description: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Date, Signature \_\_\_\_\_

**YOU MUST INCLUDE A COPY OF YOUR PROOF OF PURCHASE**

## Environment

---

### Our environmental mission statement

We at Siemens Home and Office Communication Devices GmbH & Co. KG carry social responsibility and are actively engaged in the interests of a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under [qiqaset.siemens.com](http://qiqaset.siemens.com).

### Environmental management system

---



Siemens Home and Office Communication Devices is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Ecological energy consumption

---

The use of ECO DECT (→ page 23) saves energy and is an active contribution towards protecting the environment.

## Disposal

---

Battery packs should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

## Appendix

---

### Care

---

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Specifications

---

### Recommended batteries

---

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550–1000 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ GP 700 mAh
- ◆ Yuasa Phone 700 mAh
- ◆ Yuasa Phone 800 mAh
- ◆ Yuasa AAA 800
- ◆ Peacebay 600 mAh

The device is supplied with two recommended batteries.

## Handset operating times/charging times



The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off).

	Capacity (mAh) approx.			
	550	650	800	1000
Standby time (hours)	210	240	305	380
Talktime (hours)	21	25	31	38
Operating time for 1.5 hrs of calls per day (hours)	85	100	125	155
Charging time, base station (hours)	9	11	14	17
Charging time, charging cradle (hours)	7	8	10	12

At the time of going to print, batteries up to 800 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:  
[www.siemens.com/gigasetcustomer-care](http://www.siemens.com/gigasetcustomer-care)

## Writing and editing text















The following rules apply when writing text:

- ◆ Use   to move the cursor to the left or right.
- ◆ Characters are inserted to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing an SMS (depending on the base station)/name

Press the relevant key several times to enter the corresponding letters/characters.



### Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
			1	€	£	\$	¥	□						
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	7	ß									
	t	u	v	8	ü	ú	ù	û						
	w	x	y	9	ÿ	ý	æ	ø	å					
	.	,	?	!	0	+	-	:	;	"	'	;	—	
	*	/	(	)	<	=	>	%						
			#	@	\	&	§							

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

### Setting upper/lower case or digits

Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

You can see briefly in the display whether upper case, lower case or digits is selected.

# Accessories

---

## Ordering Gigaset products



You can order Siemens Gigaset products from your specialist retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

## Mounting the charging cradle to the wall

---

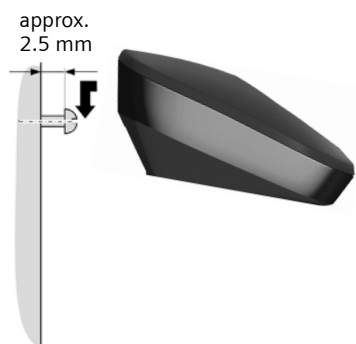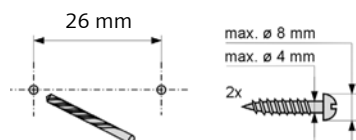

# Index

---

## A

Accepting a call . . . . .	20
Accessories . . . . .	35
Activating	
advisory tones . . . . .	26
call acceptance . . . . .	25
handset . . . . .	17
keypad lock . . . . .	17
Advisory tones . . . . .	26
Alarm clock . . . . .	24
Alarm repeat . . . . .	24
Approval . . . . .	30
Auto answer . . . . .	20, 25

## B

Backlight . . . . .	25
Base station	
setting up . . . . .	5
Battery	
charging . . . . .	1, 10
display . . . . .	1
icon . . . . .	1, 9
inserting . . . . .	7
recommended batteries . . . . .	33
warning tone . . . . .	26

## C

Call	
accepting . . . . .	20
ending . . . . .	20
external . . . . .	20
internal . . . . .	21
Call acceptance . . . . .	25
Call duration . . . . .	20
Calling	
external . . . . .	20
internal . . . . .	21
Care of the telephone . . . . .	33
Changing	
earpiece volume . . . . .	25
handsfree volume . . . . .	25
Character set . . . . .	34
Charge status display . . . . .	1
Colour scheme . . . . .	25
Confirmation tone . . . . .	26
Connect headset . . . . .	13
Contrast . . . . .	25

Control key . . . . .	1, 15
Correcting incorrect entries . . . . .	16

## D

Deactivating	
advisory tones . . . . .	26
call acceptance . . . . .	25
handset . . . . .	17
keypad lock . . . . .	17
Delete key . . . . .	15
Deleting characters . . . . .	16
Dialling	
directory . . . . .	21
with speed dial . . . . .	22
Dialling pause	
entering . . . . .	1
Digital clock . . . . .	25
Directory . . . . .	21
copying number . . . . .	23
copying number from text . . . . .	22
managing entries . . . . .	22
opening . . . . .	15
order of entries . . . . .	21
saving entry . . . . .	21
saving the first number . . . . .	21
sending entry/list to handset . . . . .	22
Display	
backlight . . . . .	25
changing display language . . . . .	24
colour scheme . . . . .	25
contrast . . . . .	25
in idle status . . . . .	16
keys . . . . .	15
screensaver . . . . .	25
setting . . . . .	25
Display keys . . . . .	1
Disposal . . . . .	32

## E

Earpiece mode . . . . .	20
Earpiece volume . . . . .	25
ECO DECT . . . . .	23
End call key . . . . .	1, 20
Ending a call . . . . .	20
Ending, see Deactivate	
Entry	
selecting from directory . . . . .	21
Environment . . . . .	32
Error tone . . . . .	26

- G**  
 General troubleshooting . . . . . 29
- H**  
 Handset  
   activating/deactivating . . . . . 17  
   advisory tones . . . . . 26  
   contact with liquid . . . . . 33  
   display language . . . . . 24  
   earpiece volume . . . . . 25  
   handsfree volume . . . . . 25  
   idle status . . . . . 16  
   muting . . . . . 20  
   restoring to factory settings . . . . . 27  
   setting . . . . . 24  
   setting up . . . . . 7  
 Handsfree key . . . . . 1  
 Handsfree talking . . . . . 20  
 Hash key . . . . . 1, 17  
 Headset socket . . . . . 13  
 Hearing aids . . . . . 4  
 Help . . . . . 29
- I**  
 Icon  
   battery . . . . . 9  
   display . . . . . 15  
   for new messages . . . . . 23  
   keypad lock . . . . . 17  
 Idle status  
   display . . . . . 16  
   returning to . . . . . 16  
 Incorrect input (correction) . . . . . 16  
 Installing, base station . . . . . 5  
 Internal  
   call . . . . . 21  
   key . . . . . 1  
   making calls . . . . . 21
- K**  
 Key 1 (fast access) . . . . . 1  
 Key click . . . . . 26  
 Keypad lock . . . . . 17  
 Keys  
   assigning directory entry . . . . . 22  
   control key . . . . . 1, 15  
   delete key . . . . . 15  
   display keys . . . . . 1, 15  
   end call key . . . . . 1, 20  
   fast access . . . . . 1  
   handsfree key . . . . . 1  
   hash key . . . . . 1, 17  
   internal key . . . . . 1  
   message key . . . . . 1  
   on/off key . . . . . 1  
   recall key . . . . . 1  
   speed dial . . . . . 22  
   star key . . . . . 1, 26  
   talk key . . . . . 1, 20
- L**  
 Last number redial . . . . . 23  
 Liquid . . . . . 33  
 Lock  
   activating/deactivating keypad lock . 17
- M**  
 Mains adapter . . . . . 4  
 Making calls  
   answering a call . . . . . 20  
   external . . . . . 20  
   internal . . . . . 21  
 Manual last number redial . . . . . 23  
 Medical appliances . . . . . 4  
 Menu  
   end tone . . . . . 26  
   overview . . . . . 19  
   prompting . . . . . 16  
 Message key . . . . . 1  
   opening lists . . . . . 23  
 Microphone . . . . . 1  
 Muting the handset . . . . . 20
- N**  
 Number  
   copying from directory . . . . . 23  
   copying to directory . . . . . 22  
   entering with directory . . . . . 23  
   saving in the directory . . . . . 21
- O**  
 On/Off key . . . . . 1  
 Order in directory . . . . . 21
- P**  
 Pack contents . . . . . 5
- Q**  
 Questions and answers . . . . . 29



## Index

### R

Range . . . . .	5
Recall key . . . . .	1
Ringer	
changing . . . . .	25
setting melody . . . . .	26
setting volume . . . . .	25

### S

Screen protection, see Screensaver	
Screensaver . . . . .	25
Searching in directory . . . . .	21
Sending	
directory entry to handset . . . . .	22
Service Centre . . . . .	28
Setting	
date . . . . .	11, 24
melody (ringer) . . . . .	26
time . . . . .	11, 24
wake up time . . . . .	24
Setting up	
handset . . . . .	7
Shortcut . . . . .	19
SMS	
writing . . . . .	34
Snooze (alarm clock) . . . . .	24
Specifications . . . . .	33
Speed dial . . . . .	22
Star key . . . . .	1, 26

### T

Talk key . . . . .	1, 20
--------------------	-------

### V

Volume	
earpiece volume . . . . .	25
handset handsfree volume . . . . .	25
ringer . . . . .	25

### W

Warning tone (battery) . . . . .	26
Warranty . . . . .	30
Writing and editing text . . . . .	34